

APOLLO 3500/3600 - GTO Automatic Gate Lock (FM144,142)

1. Connect **WHITE** wire of the lock board the terminal **LOCK** of the Remote Output terminal strip.
2. Connect **BLACK** wire of the lock board terminal 2 to **Battery - (negative terminal on the actual battery, not to the control board)**.
3. Connect **BLACK** wire of the lock to terminal 3 of the lock board.
4. Connect **RED** wire of the lock to terminal 4 of the lock board.
5. Connect **RED** wire of the lock board terminal 5 to **Battery + (positive terminal on the actual battery, not to the control board)**
6. Be sure dip switch **6** is set to **OFF**.

