

APOLLO 3500/3600 - GTO Loop Detector (LOOPDTP1) *AS A SAFETY DEVICE*

1. Connect **NO** on the loop detector to **Terminal 12 SHADOW**.
2. Connect **COM** on the loop detector to **Terminal 11 GND**.
3. Connect **V-** on the loop detector to **Terminal GND** on one of the 3 pin terminal strips .
4. Connect **V+** on the loop detector to **Terminal 12V** on one of the 3 pin terminal strips .
5. Connect your buried loop to the two **LOOP** terminals on the loop detector.
6. Set dip **4** to **OFF** for the loop detector. (The rest of the dip switches are to be set to your preference)

Terminal **NC** is not used.

APOLLO 3500/3600 - GTO Loop Detector (LOOPDTP1) *AS AN OPENING DEVICE*

1. Connect **NO** on the loop detector to **Terminal 10 FREE EXIT**.
2. Connect **COM** on the loop detector to **Terminal 9 GND**.
3. Connect **V-** on the loop detector to **Terminal GND** on one of the 3 pin terminal strips .
4. Connect **V+** on the loop detector to **Terminal 12V** on one of the 3 pin terminal strips .
5. Connect your buried loop to the two **LOOP** terminals on the loop detector.
6. Set dip **4** to **ON** for the loop detector. (The rest of the dip switches are to be set to your preference)

Terminal **NC** is not used.