

SIMPLE ENTRY CODE PROGRAMING- Linear Wireless Keypad (MDKP) with the Linear Universal Receiver (AP-4)

ALL programming of the MDKP is done on the AP-4



Press for 3 seconds

The display should read Then



Enter a user code of your choice.
It can be 1 to 6 digits long.
Example '153899'

Usage Notes:

- To enter multiple codes follow the same procedure.
- After the procedure is finished the code will be programmed into the keypad. On the keypad, type the code and # to activate the gate. **YOU MUST PRESS # AND HOLD IT FOR 1 SECOND.**

You do not need to hold the program button 3 seconds to exit, simply press it as you normally would press any button.