

APOLLO 1550/1650 - Push Button Control (RB101)

1. Connect **one of the terminals** on the back of the push button to **Terminal INP** on one of the 3 pin terminal strips .
2. Connect **the other of the terminal** on the back of the push button to **Terminal GND** on one of the 3 pin terminal strips .