

# **APOLLO 1550/1650 - GateCrafters Stainless Steel Keypad (WKP-P)**

1. Connect **O/P** terminal from the keypad to **Terminal INP** on one of the 3 pin terminal strips.
2. Connect **Gnd** terminal from the keypad to **Terminal GND** on one of the 3 pin terminal strips.
3. (OPTIONAL) Connect **12V** terminal from the keypad to **Terminal 12V** on one of the 3 pin terminal strips.
4. Move the jumper on the lower left side of the board to **J0**.

# SIMPLE ENTRY CODE PROGRAMING- GateCrafters Stainless Steel Keypad (WKP-P)

1

2

Enter default master code—this code does not open the gate ever and is not necessary to change

3

Light will flash **orange** while pressing buttons

4

○

Press programming button (lower left corner)  
Light will turn **green**

1

0

Enter the user slot number, you can have up to 60 users. Slot numbers go from '01' to '60'

1

?

?

Enter a four digit user code of your choice.  
Example '1538'

?

?

○

Press programming button (lower left corner)  
Light will turn **off**

**Diagnostic Note:** If light flashes green 3 times, there was an error. Start again from the beginning and try to press the buttons more deliberately and move quicker through the sequence.