

E-SU2200/02 - GateCrafters Stainless Steel Keypad (WKP-P)

1. Connect **O/P** terminal from the keypad to **Terminal OPEN A** on the terminal block CN4.
2. Connect **Gnd** terminal from the keypad to **Terminal COM** on the terminal block CN4.
3. Move the jumper on the lower left side of the board to **J0**.

NOTE: *Keypad is 12V ONLY, do not power from the control board of the E-SU2200/02 because it has a 24V output.*

SIMPLE ENTRY CODE PROGRAMING- GateCrafters Stainless Steel Keypad (WKP-P)

1

2

3

4

Enter default master code—this code does not open the gate ever and is not necessary to change
Light will flash **orange** while pressing buttons

○

Press programming button (lower left corner)
Light will turn **green**

1

0

1

Enter the user slot number, you can have up to 60 users. Slot numbers go from '01' to '60'

?

?

?

?

Enter a four digit user code of your choice.
Example '1538'

○

Press programming button (lower left corner)
Light will turn **off**

Diagnostic Note: If light flashes green 3 times, there was an error. Start again from the beginning and try to press the buttons more deliberately and move quicker through the sequence.