

E-S1600/02 - Extended Range Antenna(LR318ANT)

1. Cut off the male coaxial connector if not already done.
2. Strip back the coaxial outer layer to reveal the metal mesh shield.
3. Twist the shield into a thin wire-like state.
4. Strip back the inner coaxial sheath to reveal the inner coaxial wire..
5. Remove the black antenna wire from the outer terminal of the receiver board and insert the now exposed inner coaxial wire.
6. Insert the twisted shield into the second (previously unused) terminal.

