

# **E-SC1102 - Estate Swing Stainless Steel Keypad (EASYKA) or (EASYBKA)**

1. Connect **Gray** wire from the keypad to **Terminal 1** on the terminal strip.
2. Connect **Purple** wire from the keypad to **Terminal 12** on the terminal strip.
3. Connect **Red** wire from the keypad to **Terminal 11** on the terminal strip.
4. Connect **Black** wire from the keypad to **Terminal 13** on the terminal strip.
5. The rest of the wires are used in more complex situations where the user is wishing to do more than simply control entering and exiting by code.

# SIMPLE ENTRY CODE PROGRAMING- Estate Swing Stainless Steel Keypad (EASYKA) or (EASYBKA)

#

Press in rapid succession

#

Light will turn from **green** to **red**

---

1

2

Enter default master code—this code does not open the gate ever and is not necessary to change

3

Light will go from **red** to **green**

4

---

7

Light will turn from **green** to **orange**

---

0

Enter the user slot number, you can have up to 500 users. Slot numbers go from '001' to '500'

0

A second light will flash **green**

1

---

?

?

Enter a four digit user code of your choice.  
Example '1538'

?

The second light will turn from **flashing green** to **solid green**

?

---

#

Press in rapid succession

#

**Orange** light will go out, **green** will stay on.

**Diagnostic Note:** If light flashes red, slot already has a code. Press '##' to exit and restart process with a different slot number or follow instructions to delete a slot code.