

# **SW3000/02 - Long Range Receiver (ER294-1K)**

1. Connect **YELLOW** from the receiver to **Terminal CYCLE CLOSE**.
2. Connect **WHITE** from the receiver to **Terminal COMMON**.
3. Connect **RED** from the receiver to **Battery + (positive terminal)**.
4. Connect **BLACK** from the receiver to **Battery - (negative terminal)**.
5. For better reception hang the antenna wire outside the control box, be sure to seal the control box to where you run the wire out to ensure the box stays weatherproof.
6. Set the internal dipswitches to match your remotes and set the larger dipswitches to **12V** and **Continuous**.

***THE ORANGE WIRE IS NOT USED.***