



Estate SWING

Product Overview

1. Power Supply: (4 Double A) Alkaline batteries 1.5V
2. Standby current: 18uA (sleep mode) 6mA (active) working: 28mA.
3. Three LED indicators: Red, Green, Blue.
4. Two channel operation.
5. Total of 11 pin codes can be programmed. Channel one will hold 8 codes and channel two will hold 3 codes.
6. Anti-tamper alarm.
7. 433 Mhz frequency.
8. Scrambled pin codes.
9. On/Off option for backlight.
10. Weatherproof exterior

How to: Program user entry code

Estate swing 433 Mhz 2-Channel gate opener access touch keypad manual

NOTE: This keypad utilizes two channels that can communicate with two separate receives independently. While in programming mode if there is no activity within 6s then the keypad will exit programming.

Step 1	Step 2	Step 3	
Enter master code: 0000 *	Enter Channel number and # symbol EX: 01# or 02#	Enter desired 4 digit entry code and # EX: 4525#	
Keypad tone	Keypad tone	Keypad tone	
Long beep	One short beep or two short beeps	Long beep followed by a short beep (complete)	

NOTE: If you would like to see if the code is programmed simply enter the entry code followed by # after all LED's have turned off on the keypad. If the code was successfully programmed then the Green LED will illuminate after the entry code followed by # has been entered. To program another entry code follow the same steps again, once another code is entered it will fill the next open slot under the channel you choose.

How to: Changing factory master code

NOTE: The factory master code is 0000. The master code is for programming purposes only. You can confirm the master code after programming by trying enter programming mode.

Step 1	Step 2	Step 3	
Enter Master code: 0000*	Enter: 69#	Enter new 4 digit master code EX: 3432#	
Keypad tone	Keypad tone	Keypad tone	
Long beep	One short beep	Long Beep followed by Short beep (complete)	

Estate swing 433 Mhz 2-Channel gate opener access touch keypad manual

How to: Turning off/on buzzer alarm

NOTE: Buzzer is set to ON from the factory. When turned OFF in silent mode a press of a number will make that key flash as an indicator that it was pressed and it will only beep during programming mode. To turn the buzzer back ON repeat the steps below.

Step 1	Step 2
Enter master code: 0000*	Enter: 36#
Keypad tone	Keypad tone
Long beep	Long beep followed by short beep (complete)

How to: Turning backlight off/on

NOTE: The backlight is set to ON from the factory. To turn the backlight ON after turning OFF repeat the steps below.

Step 1	Step 2
Enter master code: 0000*	Enter: 39#
Keypad tone	Keypad tone
Long beep	Long beep followed by short beep (complete)

Estate swing 433 Mhz 2-Channel gate opener access touch keypad manual

How to: Check which channel a entry code is programmed to

NOTE: The number of times that the long beep sounds will determine which channel the pin code is programmed to. Ex. two long beeps means that the code is programmed to CH2. One long beep will be for CH1.

Step 1	Step 2	Step 3
Enter master code: 0000*	Enter: 86#	Enter 4 digit entry code followed by #
Keypad tone	Keypad tone	Keypad tone
Long beep	Long beep followed by short beep	One long beep = CH1 Two long beeps = Ch2 (complete)

How to: Test battery

Step 1	Step 2
Enter master code: 0000*	Enter: 89#
Keypad tone	Keypad tone
Long beep	Long beep= Good battery Short beep= Low battery (Complete)

Estate swing 433 Mhz 2-Channel gate opener access touch keypad manual

How to: Delete all entry codes

Step 1	Step 2
Enter Master Code: 0000*	Enter: 00#
Keypad tone	Keypad tone
Long beep	Long beep followed by short beep (complete)

How to: Program 10 second transmitting

NOTE: If you would like to turn this function OFF simply repeat the same steps below.

Step 1	Step 2	Step 3
Enter master code: 0000*	Enter: 55#	Enter CH number: EX 01# or 02#
Keypad tone	Keypad tone	Keypad tone
Long beep	Short beep	No tone keypad will exit programming

Estate swing 433 Mhz 2-Channel gate opener access touch keypad manual

How to: Scrambled entry codes

NOTE: In case you are accompanied by someone you do not want to see your entry code while you are entering it. Simply press any of the numbers (0-9) on the keypad. You can not use the # or * symbol. Enter numbers (0-9) as many times as you would like followed by the 4 digit entry code then #. The keypad will automatically ignore all scrambled numbers before the 4 digit entry code and grant you access.

Security lock function

The security lock function will activate automatically after an entry code has been entered incorrectly 3 times. The keypad will lock for 2 minutes, sound 3 beeps, then the red LED will illuminate. After 2 minutes the keypad will unlock.

How to: Factory reset keypad

1. Disassemble the keypad by removing it from the hood cover.
2. Allow the alarm to sound while the keypad is disassembled.
3. Locate the reset button on the top of the keypad in a small hole to the right of the alarm.
4. Press and hold the reset button for 20 seconds or until you see all the LED indicators illuminate on the top of the keypad.
5. Once you get the above indicator you can assemble the keypad and it will be reset back to factory settings.

Estate swing 433 Mhz 2-Channel gate opener access touch keypad manual

How to: Program entry code to 433 Mhz estate swing receiver.

1. Press and release the learn button on the 433 receiver



2. Within 10 seconds enter your 4 digit entry code followed by #.
3. The learn LED will blink and turn off once the code is synced.
4. Now enter the 4 digit code followed by # on the keypad and the gate will open.

NOTE: Repeat the above steps to program multiple entry codes.